ELECTRIC
SKILLET

Mega Cocina®

ELECTRIC SKILLET
SARTÉN ELÉCTRICO

SAVE THESE INSTRUCTIONS

GUARDE ESTAS INSTRUCCIONES

THIS UNIT IS FOR HOUSEHOLD USE ONLY FOR 120V
To reduce the risk of shock, this appliance has a polarized plug (one blade is wider than the other. This plug fits polarized outlets only one way. If the plug does not fully insert in the outlet, reverse the plug.If it still fails to fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ESTA UNIDAD ES SOLO PARA USO DOMESTICO PARA TOMACORRIENTES DE 120V. Este electrodoméstico tiene enchufe polarizado (una de las clavijas del enchufe es más ancha que la otra) para minimizar el riesgo de una descarga eléctrica. Este enchufe debe ser insertado en el tomacorriente polarizado de una sola manera. Si el enchufe no entra por completo en el tomacorriente, intente insertarlo al revés. Si aún no entra por completo, póngase en contacto con un electricista calificado. No intente modificar la característica de seguridad en este enchufe.

INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES

Model : MCVSSK7

Table of Contents

Introduction.....1

Parts/Safety Instructions.....2-3

How to Use.....4

Operation/Care and Maintainence.....5

Contenido

Introducción.....6

Componentes/ Instrucciones de Seguridad.....7-8

Cómo Usar.....9

Uso/Cuidado y Mantenimiento.....10

Mega Cocina®

Thank you for purchasing a MegaCocina® Electric Skillet.
We appreciate your business and are confident that you will enjoy the advantages of owning this superior appliance.

DESCRIPTION OF THE APPLIANCE

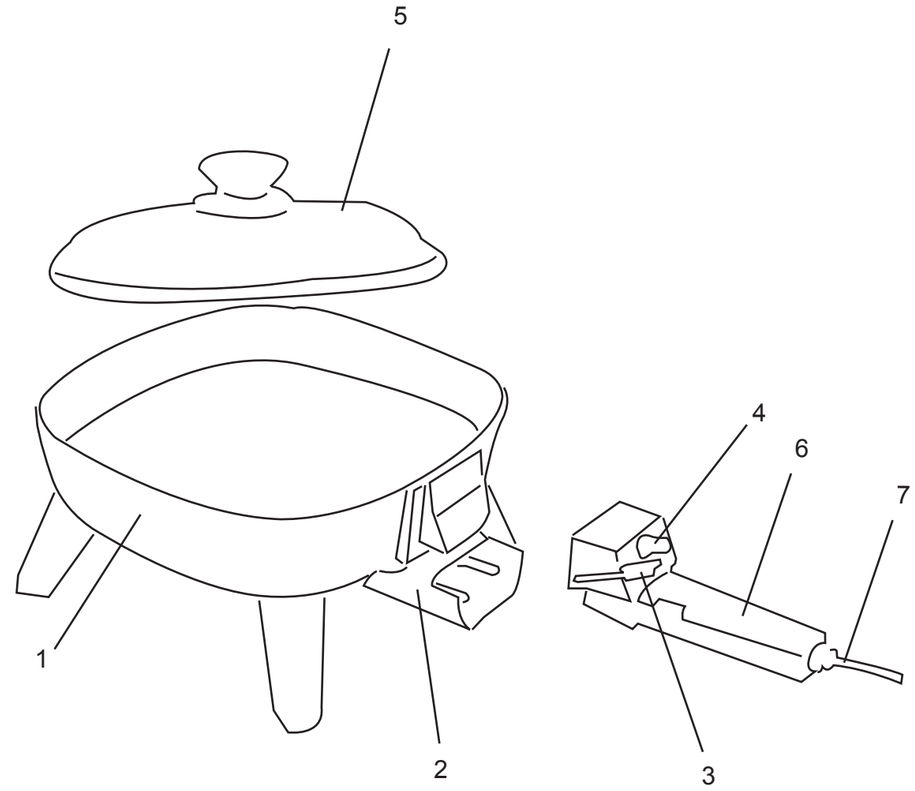

1. Skillet
2. Socket
3. Quick Release Lever
4. Heat Control Knob
5. Glass Lid
6. Heat Control Knob Handle
7. Power Supply Cord

READ ALL INSTRUCTIONS BEFORE USE.

⚠ **WARNING-- To reduce the risk of personal injury or property damage, when using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Be sure that heat control knob handle is assembled and fastened properly before using this appliance.
3. **DO NOT** touch hot surfaces. Use heat control knob handle or knob.
4. To protect against electrical shock, do not immerse control, cord, or plug in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children or handicapped people.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. **DO NOT** operate if the legs become cracked or damaged.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter or touch hot surfaces.
11. **DO NOT** place this appliance on or near a hot gas or electric burner or in a heated oven.
12. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid. If it must be moved when it contains hot oil or other hot liquid, use extreme caution.
13. Always attach heat control knob handle to appliance first. Then plug power supply cord into wall outlet. To disconnect, turn control to "**OFF**". Then remove plug from wall outlet.
14. **DO NOT** use appliance for other than intended use.
15. A short detachable power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
16. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
17. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
18. If the appliance is of the grounded type, the extension cord should be a grounded-type 3-wire cord.
19. There are no user serviceable parts inside. Repair should be done only by authorized service personnel.
20. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

1. Insert the heat control knob handle firmly into the socket. Important: Make sure the heat control knob handle is securely inserted.
2. Plug unit into an AC electric outlet.
3. Turn heat control knob to desired setting or according to your recipe.
4. When finished cooking, turn heat control knob to OFF.
5. Use plastic, rubber or wooden utensils when cooking and serving.
6. If using metal utensils, be careful not to scrape the non-stick finish.

HOW TO USE

1. Place skillet on a dry, level surface. To prevent possible heat damage to your countertop, place a heat resistant counter protector, such as a towel, under appliance.
2. Insert the heat control knob handle, with the quick release lever up, into the skillet so that the two electrical pins on the skillet socket are fully inserted properly into the heat control knob handle. Press the quick release lever down and slightly to the right, to lock into place.
3. Connect cord to a polarized outlet only. As a safety feature, this appliance has a polarized plug (one blade is wider than the other).This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
4. Turn heat control knob to desired temperature. Remove cover and preheat skillet (this takes approximately 2-3 minutes).
5. Prepare food for cooking.
6. Because the skillet features a non-stick finish, food may be prepared with or without shortening, according to taste.
7. Place food in skillet and cook according to the desired temperature. Heat should be adjusted according to personal preference and particular food being cooked.

Mega Cocina®

8. Turn heat control knob to **OFF** when cooking is completed. Unplug the power supply cord from the wall outlet. Wait until the skillet cools down. Then disconnect the heat control knob handle from the skillet socket.

Before inital use and after each subsequent use, wash skillet in warm sudsy water, rinse and dry. **DO NOT** immerse heat control knob handle or power supply cord in water or let it come in contact with any other liquid.

For best results use nylon, plastic, wooden, or rubber utensils. **DO NOT** use metal utensils as they may scratch the non-stick surface.

If there is any food residue remaining on the cooking surface, it should be removed after each use. To do so, scrub gently with a **MILD** abrasive cleanser or a fine cleansing pad. **DO NOT** use steel wool or abrasive kitchen cleaners. Soaking the skillet to loosen food residue is not necessary.

CARE AND CLEANING

1. Unplug the power supply cord and let unit cool completely.
2. Make sure the heat control knob handle is removed.
3. Wash the skillet and glass lid with warm sudsy water. The glass lid can also be washed in a dishwasher, top rack only.
4. If washing by hand, use a sponge or nylon scouring pad with liquid detergent. **DO NOT** use any abrasive cleaners or metal pads as they can damage the non-stick coating.
5. Rinse and dry.
6. Wipe the outside of the base with a damp cloth. **DO NOT** immerse in water or other liquid.
7. Store the appliance in a dry place and wind the electric power supply cord into a coil, securing it with a twist fastener.

Mega Cocina®

Muchas gracias por comprar el Sartén Eléctrico Mega Cocina®.
Apreciamos su interés y estamos seguros que usted disfrutará
las ventajas de ser dueño de este electrodoméstico de superior calidad.

DESCRIPCIÓN DEL APARATO

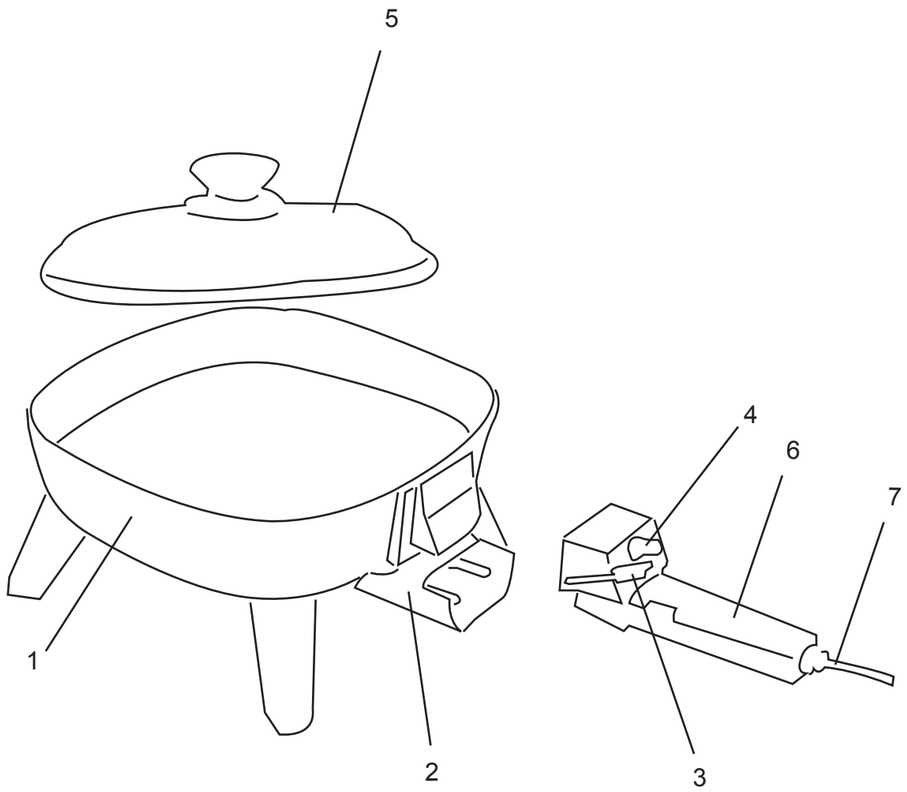

1. Sartén
2. Enchufe
3. Palanca de liberación
4. Selector de temperatura
5. Tapa de Vidrio
6. Mango del selector de temperatura
7. Cable eléctrico

LEA TODAS LAS INSTRUCCIONES ANTES DE USO

⚠ADVERTENCIA-- Para reducir el riesgo de lesiones personales o daños a la propiedad, cuando use productos eléctricos, siempre se deben seguir medidas básicas de seguridad incluyendo las siguentes:

1. Lea todas las intrucciones.

2. Asegúrese que el mango del selector de temperatura esté montado y fijado correctamente antes de usar el sartén.

3. NO toque las superficies calientes. Utilice las asas o mangos.

4. Para evitar choques eléctricos, NO sumerja el cable, el enchufe, o el sartén en agua u otros líquidos.

5. Se requiere estricta supervisión cuando las personas incapacitadas o los niños utilicen cualquier electrodoméstico.

6. Desenchufe el aparato cuando no lo esté usando o cuando lo esté limpiando. Deje que se enfríe antes de poner o remover partes o accesorios o antes de limpiar.

7. NO opere ningún producto con un cordón o enchufe dañado, despúes de que el aparato haya fallado o si se cae al suelo o se daña de cualquier otra manera. NO opere si las patas se agrietan o se dañan.

8. El uso de accesorios no recomendados o vendidos por el fabricante del producto puede causar lesiones.

9. NO lo utilice al aire libre.

10. NO permita que el cable cuelgue del borde de la mesa o mostrador o que entre en contacto con superficies calientes.

11. NO coloque este aparato sobre o cerca de hornillas de estufas de gas o eléctricas ni dentro de un horno caliente.

12. Se recomienda que el sartén no se mueva cuando contenga aceite caliente u otro líquido caliente. Si se tiene que mover cuando contenga aceite caliente u otro líquido caliente, use extrema precaución.

13. Siempre fije el mango del selector de temperatura al sartén primero. Luego enchufe el cable eléctrico en el tomacorriente. Para desconectar, ponga el control de temperatura en "OFF". Luego desconecte el cable del tomacorriente.

14. NO utilice este aparato para otro propósito que no sea para el que ha sido diseñado.

15. El aparato viene con un cable eléctrico corto y desmontable como medida de seguridad para prevenir el riesgo de tropezar, tirar o enredarse con un cable más largo.

16. Se puede utilizar una extensión eléctrica si se observan las precauciones adecuadas. Si se usa una extensión, la capacidad nominal debe ser la misma que la del sartén eléctrico.

17. NO permita que el cable cuelgue del borde del mostrador o mesa donde pueda tirarlo un niño o pueda tropezar con él accidentalmente.

18. Si el aparato es de conexión a tierra, el cable de extensión debe ser un cable con conexión a tierra de tipo 3.

19. NO hay piezas de repuesto en el interior. Reparación debe ser realizada unicamente por personal de servicio autorizado.

20. Si el cable eléctrico está dañado el mismo debe ser reemplazado por el fabricante, su agente de servicio o persona similar competente para evitar riesgos.

GUARDE ESTAS INSTRUCCIONES

1. Introduzca el mango del selector de temperatura firmemente en el enchufe. IMPORTANTE: Asegúrese que el mango del selector de temperatura esté fijado firmemente.
2.Enchufe la unidad en un tomacorriente AC.
3. Gire el selector a la temperatura deseada o de acuerdo a su receta.
4.Cuando termine de cocinar, gire el selector a "OFF".
5. Use utensilios de nilón, plástico, o madera cuando esté cocinando o sirviendo.
6. Si utiliza utensilios de metal, tenga precaución de no raspar la superficie antiadherente.

CÓMO USAR

1. Coloque el sartén eléctrico sobre una superficie seca y nivelada. Para prevenir posible daño de calor a su mostrador coloque un protector de calor tal como una toalla debajo del sartén eléctrico.
2. Coloque el mango del selector de temperatura en el enchufe del sartén moviendo la palanca de liberación hacia arriba, verficando que las clavijas eléctricas estén completamente insertadas en el mango. Presione la palanca de liberación hacia abajo para asegurarla en su lugar.
3. Conecte el cable a un tomacorriente polarizado unicamente.
Este electrodoméstico tiene enchufe polarizado (una de las clavijas del enchufe es más ancha que la otra) para minimizar el riesgo de una descarga eléctrica. Este enchufe debe ser insertado en el tomacorriente polarizado de una sola manera. Si el enchufe no entra por completo en el tomacorriente, intente insertarlo al revés, Si aun no entra por completo, póngase en contacto con un electricista calificado. No intente modificar esta característica de seguridad en este enchufe.
4. Gire el selector a la temperatura deseada. Remueva la tapa y precaliente el sartén (esto toma alrededor de 2 a 3 minutos.)
5. Prepare la comida para cocinar.
6. Ya que el sartén tiene una superficie antiadherente, la comida se puede preparar con o sin aceite, de acuerdo al gusto.
7. Ponga la comida en el sartén y cocine en la temperatura deseada. La temperatura debe ser ajustada de acuerdo a la preferencia personal y la comida que esté cocinando.
8. Gire el selector de temperatura a "OFF" cuando termine de cocinar. Desenchufe el cable del tomacorriente. Espere que el sartén se enfríe y luego desconecte el mango del selector de temperatura del enchufe del sartén.

Antes y después de uso, lave el sartén en agua tibia con jabón, enjuague y seque. NO sumerja el mango del selector de temperatura o el cable eléctrico en agua o permita que se pongan en contacto con algún líquido.

Para mejor resultado use utensilios de nilón, plástico, o madera. NO utilice utensilios de metal ya que pueden raspar la superficie antiadherente.

Si quedan residuos de comida en la superficie del sartén, los mismos deben ser removidos después de cada uso. Para hacerlo, frote suavemente con un limpiador suave o una esponja de limpieza fina. No use esponjas de fibra metálica o limpiadores abrasivos de cocina. El remojar el sartén para aflojar los residuos de comida no es necesario.

CUIDADO Y MANTENIMIENTO

1. Desenchufe el cable eléctrico y permita que el sartén se enfríe completamente.
2. Asegúrese que el mango del selector de temperatura sea removido.
3. Lave el sartén y la tapa de vidrio en agua tibia con jabón. La tapa de vidrio también se puede lavar en un lavaplatos sólo en el estante superior.
4. Si se lava a mano, use una esponja o estropajo de nilón con un detergente de líquido. No use limpiadores abrasivos o esponjas de fibra metálica ya que pueden raspar la superficie antiadherente.
5. Enjuague y seque.
6. Limpie el exterior de la base con un paño húmedo. No la sumerja en agua u otro líquido.
7. Guarde el sartén en un lugar seco y enrolle el cable eléctrico y asegúrelo.

Mega® and **MegaCocina®**
are registered trademarks of
Megatrade International, Inc.
2727 Westwood Drive
Nashville, TN 37204 U.S.A.
Tel.: (615) 292-5959 Fax (615) 292-5988
www.MegaVacuumFlasks.com
www.MegaCocina.com

OTHER PRODUCTS AVAILABLE:

www.MegaVacuumFlasks.com

FOR HOME ***FOR WORK*** **FOR PLAY**

www.MegaCocina.com

HOT OR COLD... Mega® HAS IT ALL!

KEEP HOT OR COLD FOR HOURS !

HOT OR COLD
FOOD AND LIQUID CONTAINERS

SPORTS BOTTLES
COOLERS
LUNCHKITS

CARAFES
PITCHERS

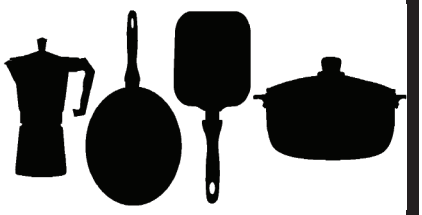

COOKWARE
COFFEE MAKERS
COOKING UTENSILS

FRIO O CALIENTE... Mega® PARA SIEMPRE!